

**THIS PRODUCT IS FOR HOUSEHOLD USE ONLY!
PLEASE READ CAREFULLY THIS MANUAL BEFORE YOUR
FIRST USE AND SAVE IT FOR FUTURE REFERENCE.**

IMPORTANT SAFEGUARDS

When using electrical appliance. Basic safety precautions should always be followed including the following:

1. Before connecting your vacuum cleaner into the wall outlet, please ensure that the current corresponds to that recommended for your device and your wall outlet is properly grounded.
2. Do not immerse the appliance in water or other liquid.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Do not touch the appliance with wet hands or feet when it is plugged into the wall outlet.
5. Never leave the appliance unattended when connected to the power supply.
6. Do not allow children or anyone who has not read these instructions use your vacuum cleaner
7. Disconnect the unit from the wall outlet when not in use.
8. Do not leave your device exposed to the weather (wind, rain), sources of heat, direct sunlight, humidity and sharp edges. Keep the device away from sources of heat like radiators, ovens, etc.
9. Do not use non-manufacturer-approved extension cords; they could cause damage to the unit or fire.
10. Do not use or do not plug your device, if:
 - i. The cord is defective or damaged,
 - ii. The product has been dropped,
 - iii. It shows signs of damage or malfunction.
11. It is recommended to check regularly the supply cord for any sign of possible deterioration, and the appliance should not be used if the cable is damaged.
12. Never disassemble your product yourself.
13. In case of operation of your device, do not try to fix it yourself, we ask you to contact your dealer repair shop, after-sales service, qualified electrician or similarly qualified person in order to avoid any danger.
14. This appliance is intended for household use.


15. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
16. Keep your device and its power cord out of the reach of children under 8 years.
17. In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene, etc.) out of their reach.
18. **WARNING!! DO NOT ALLOW SMALL CHILDREN TO PLAY WITH THE FOIL. THERE IS A DANGER OF SUFFOCATION!**
19. Never use without the filter. Check that the filter is inserted correctly before use!
20. Hair, clothing and body parts should be away from the vacuum nozzle during use!
21. **WARNING!** Before cleaning, remove the mains lead from the socket.
22. Under no circumstances should you immerse the device in water for cleaning purposes. Otherwise, this might result in an electric shock or fire.
23. **CAUTION:** Never wash the filter in the washing machine and do not use a hairdryer for drying it!
24. Never pull the cable out up to the red mark as the cable winding can be damaged! Please pull out the cable up to the maximum length indicated with the yellow mark.

IT IS FORBIDDEN TO REPLACE YOU EVEN THE POWER CABLE. IF IT IS DAMAGED, IT MUST BE REPLACED BY THE SERVICE STORE YOUR DEALER, MANUFACTURER, ITS SERVICE PERSON OR SIMILAR QUALIFICATION TO AVOID A HAZARD.

FOR ANY PROBLEM OR REPAIR, PLEASE KINDLY CONTACT THE SERVICE STORE YOUR DEALER, MANUFACTURER, ITS SERVICE PERSON OR SIMILAR QUALIFICATION TO AVOID A DANGER.

Main Part Identifications:

1. Floor Brush
2. Retractable brush knob
3. Tube
4. Airflow control
5. Hose
6. Dust container
7. Dust cup Handle
8. Power cable
9. Wire auto-rewinding button
10. Dust container unlocking button
11. Power on/off button
12. Air out-let filter
13. Grid filter
14. Sponge filter
15. Dust release button
16. Crevice brush

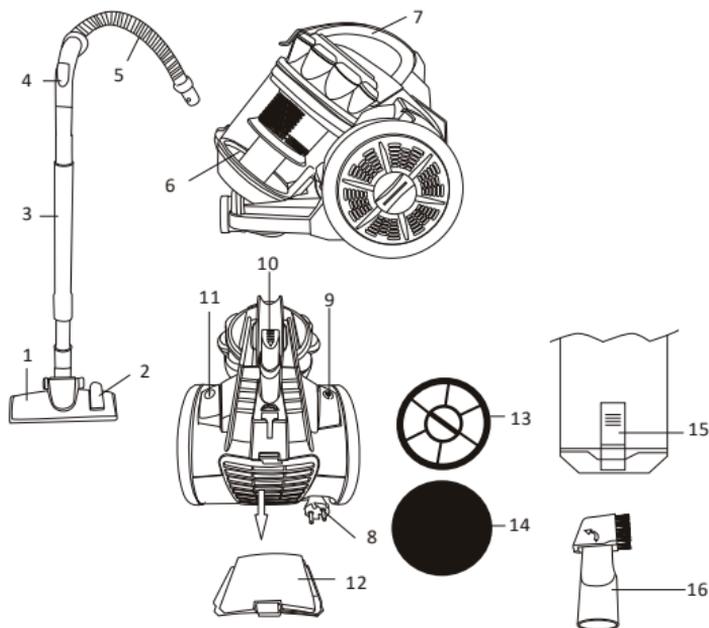

I. Brief Introduction:


The vacuum cleaner features exquisite appearance, graceful in color, reasonable in internal structure. This cyclone vacuum cleaner with foot push switch and automatic wire rolling button on it, and also has many absorbing attachments. Its absorb power is controlled by electronics and it features low noise and high efficiency. It makes your life comfortable if you choose this machine.

II. For the sake of safety, please comply with following instruction:

1. After using, don't pull the power cable when you want to stop the power.
2. Don't run the appliance over the power cable when operating.





3. Don't suck the burning cigarettes.
4. Don't suck water or other liquid.

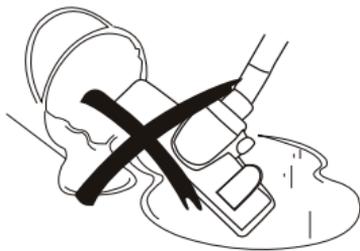

5. Don't suck sharp things too heavy things.

6. Don't place it near heat source.

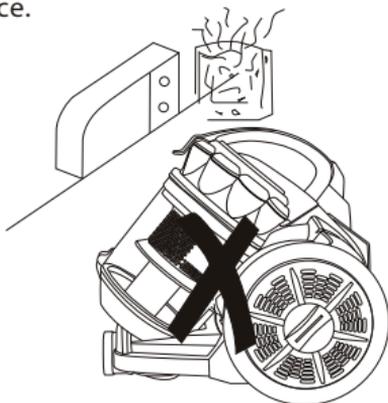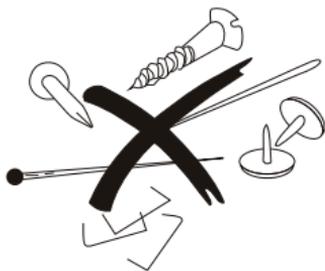


IV. How to use




1. Preparation

(1) Let the end of the hose insert into the air intake socket anticlockwise 90° until clicking position.

(2) After using, turn the hose with clockwise 90° and pull the end out

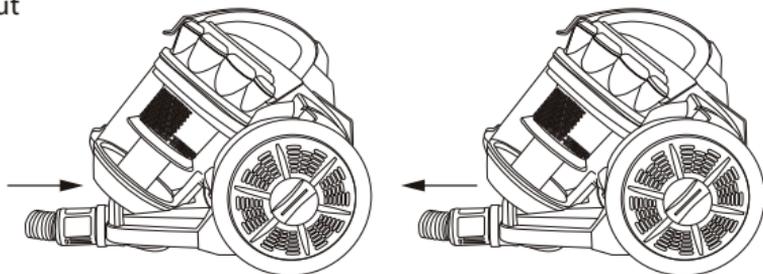


(3) Fit the extension tube to the handle, tube and tube to floor brush as showing in the picture.

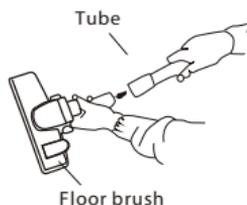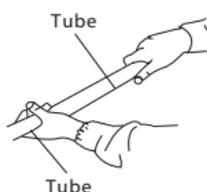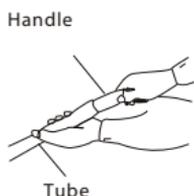


2.Using the machine

Pull out the wire to suitable length, insert the plug into power socket , press the switch to run the machine. The vacuum cleaner begins to work. The part, which can adjust wind volume, is on the handle.

Attention: Don't extend the cable beyond the RED mark

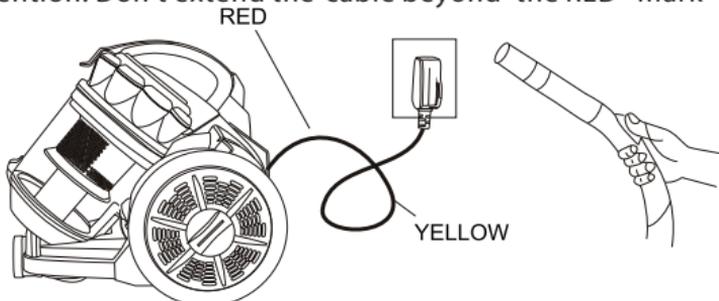

Take off the protective parts on the bottom base before gliding on the floor.

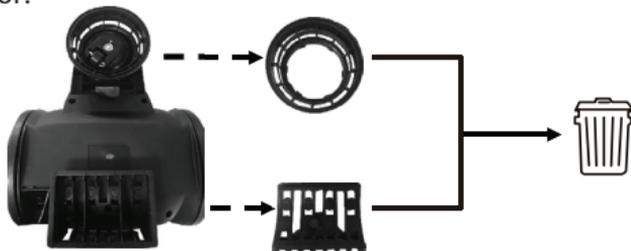


3.Using accessories.


Dual-position carpet/floor brush

Pos.1:bristles extended, for hard floor

Pos.2: bristles retracted, for carpet

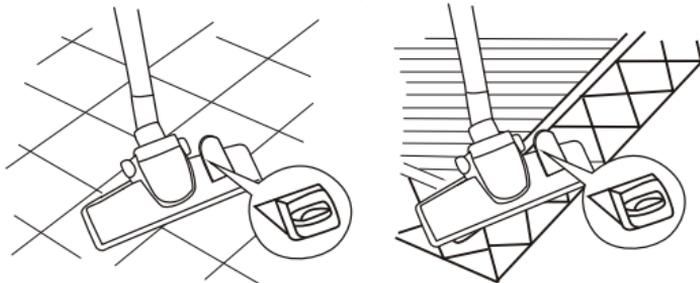

The narrow nozzle is for cleaning corners, edges of drawers, curtains, lamps and clothing etc.

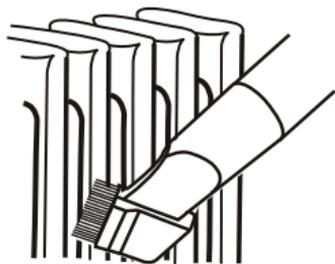


4. After using

(1) Press On/Off switch to stop the machine, and press the cord-rewinders button to roll back the wire steadily .


Attention: If the power cable can't rewind completely , please pull out the power cable a little bit and press the cord-rewind button again. You can repeat the rewinding step until the cable is rewound completely.

(2) After using, you can put them as showing in the picture.

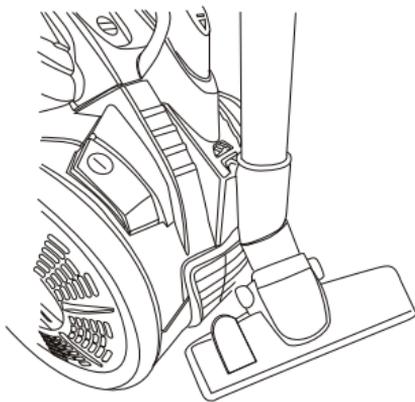

V. Replacing the Dust-cup

1. When the dust reach to the MAX board level in the dust-cup, it means dust-cup is full. At this moment, dust-cup should be emptied.

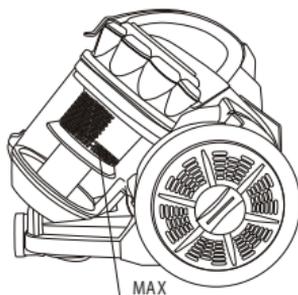


2. Open the dust-cup as showing in the picture.




••




•••

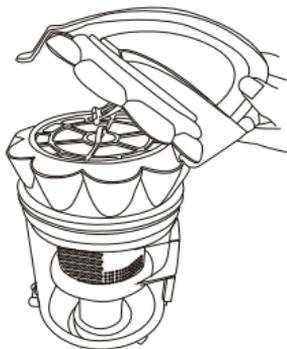

VI. Maintenance

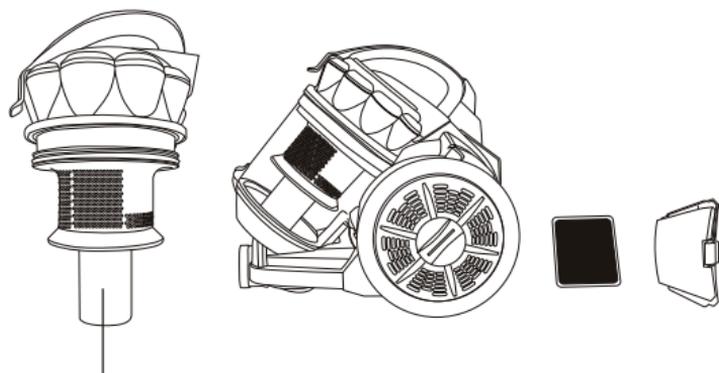

PLASTIC FILTER

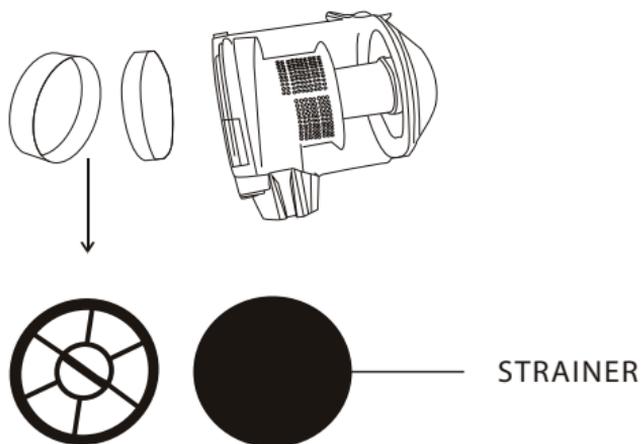

STRAINER

1. The plastic filter should often be washed when it is dirty so in order to avoid barrier.

2. When the sponge filter is full of dust, it should be washed or replace.

Attention: Don't wash the filter in the washing machine or dry it with electrical heater, please refix it after drying the filter in the air.

3. Don't clean the outer-shell of vacuum cleaner in petrol oil-like liquid. Please rub it with water and soft soap liquid.

Attention:(1) Don't clean the machine with the cloth full of water. Don't let the water flow into the vacuum cleaner.

(2)Use only as described in manual. Only use manufacturers recommended attachments.

(3)This appliance is intended to normal household use.

We decline liability for any damage or accident derived from any use of this product which is not in conformity with the instructions contained in this booklet.

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Recycling

This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE).

This means that this product must be handled pursuant to European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities. Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.



ZLN3451

Vacuum Cleaner technical

- Multi-stage filtration system
- Filter HEPA 13
- Airflow control on handle
- Pedal switch and Automatic Cord Rewinder
- 360° turnable and flexible hose
- One click to release dust
- Accessories :plastic two parts tube , carpet & floor brush, 2-in-1 nozzle ,flexible hose with air flow adjuster
- AC 220-240V ~ 50/60Hz 700W
- 2.5L capacity Noise :79dB